


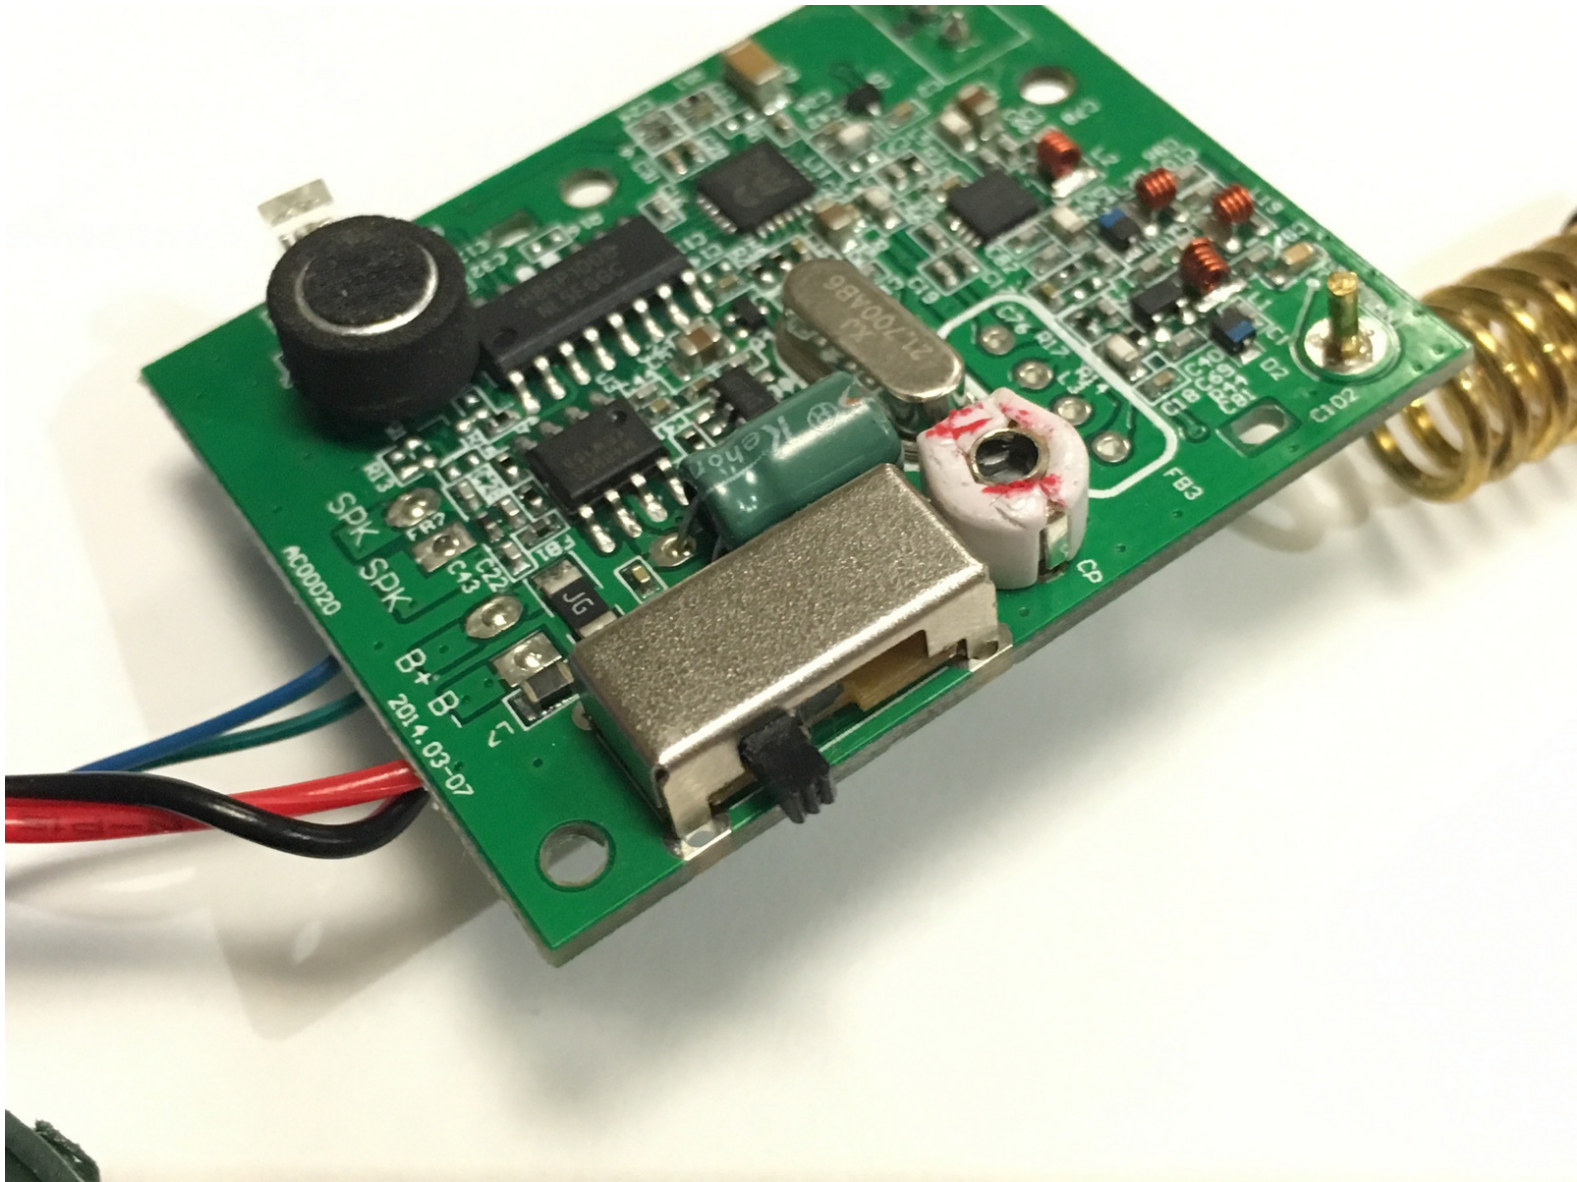

Kidzlane Walkie-Talkie Power Button Replacement

You will be able to replace the power button. if you successfully follow the rules, you will be able to replace the button securely.

Written By: Amin



INTRODUCTION

You will need to use solder device in order to be able to replace the power button.



TOOLS:


- [Soldering Workstation](#) (1)
 - [Philips screwdriver](#) (1)
-

Step 1 — Power Button





- Use a screwdriver to remove the four pictured 4 mm screw.
- The four screws are cater corner from each other.

Step 2

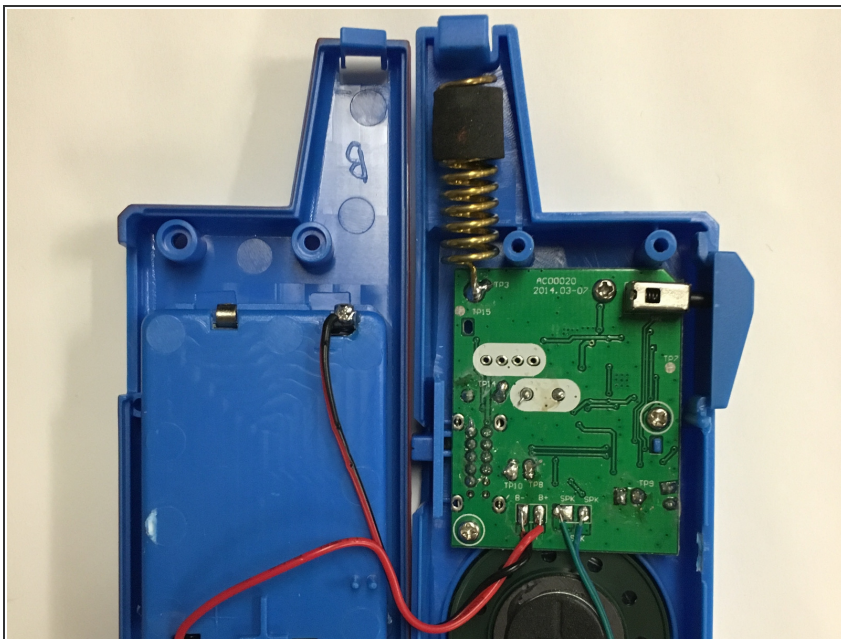

- Slowly separate the cases of the device. Try not to damage the wires connecting the two pieces.
- Keep the two pieces away from each other so you can follow the next step accordingly.

Step 3

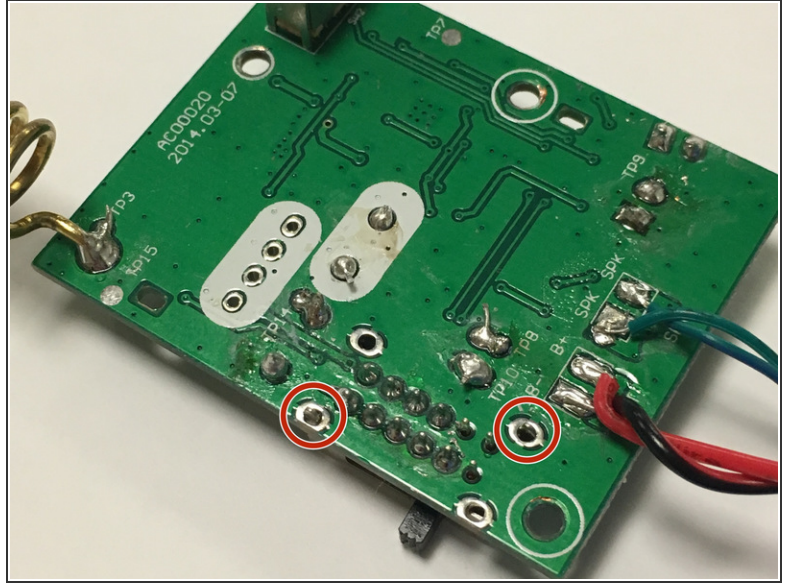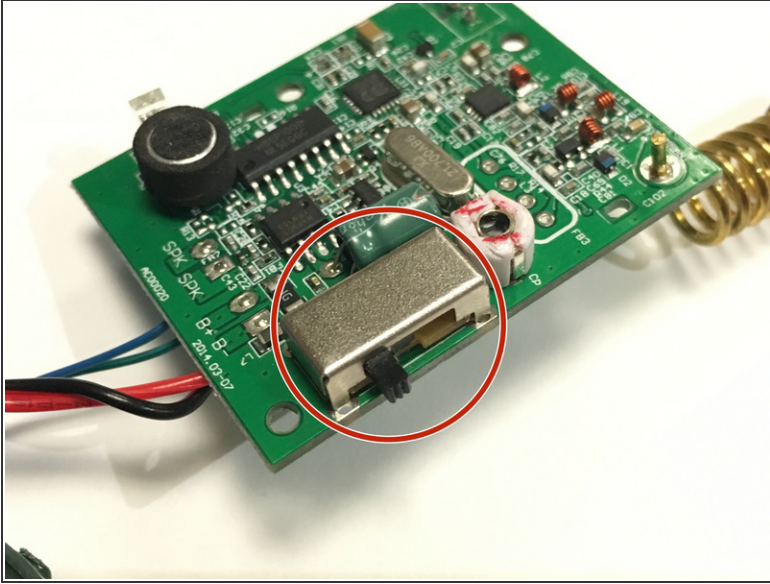

- Use the soldering iron to remove the broken switch.
- Push down on the metal locks to separate the switch from the mother board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-25 10:16:09 PM.